


Instruction Manual — ColdSAFE PLUS 96h

Your ColdSAFE parcel is now ready for dispatch.

- 11** Close the large cardboard box and seal it.
- 10** Close the insulation foam cube with the top element.
- 9** Close the small aluminium cardboard box and seal it.
- 8** Place the 2nd cooling element on top of your product into the aluminium cardboard box.
- 7** Place your product in the middle.
- 6** Place the 1st cooling element on the bottom of the aluminium cardboard box.
- 5** Fold the small cardboard (with aluminium patina) into a box.
- 4** Place the insulation foam in the cardboard box forming an open cube.
- 3** Fold the large cardboard into a box. Do not close lid.

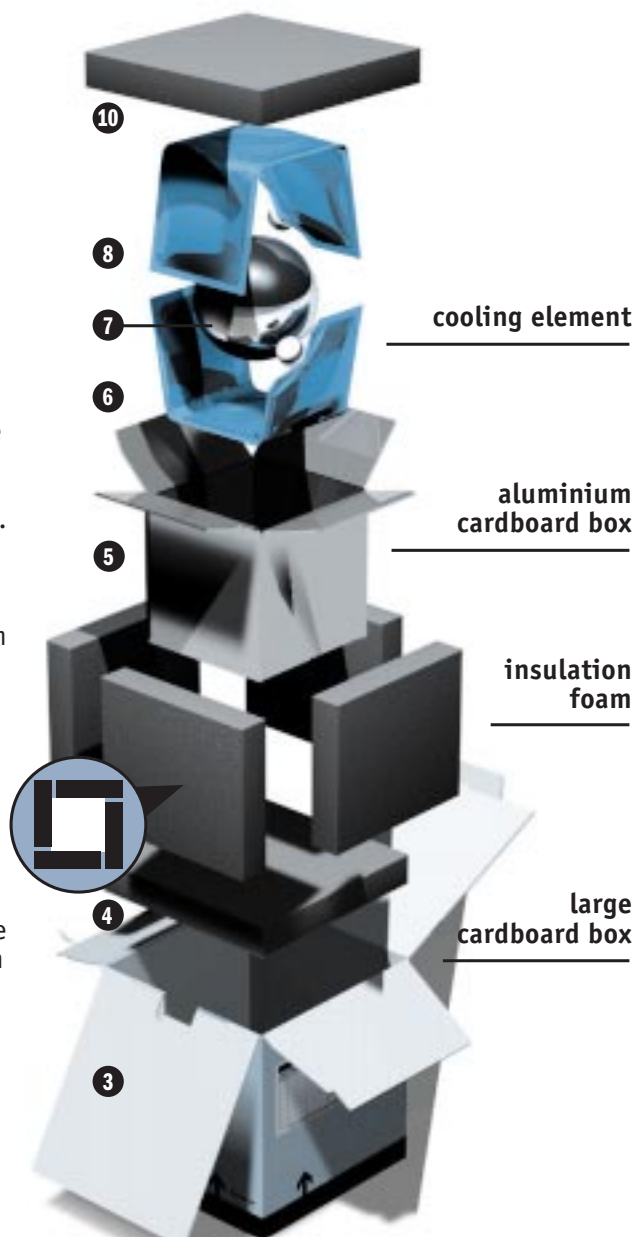

24 hrs before dispatch

- 1** Open the cooling elements and fill them with water up to the marking.

Expel all air.



- 2** Reseal the cooling elements and lay in Z-form in a freezer for 24 hrs before sending the parcel.



START HERE